

A2 mini - FAQ

No.	QUESTION	ANSWER
1	Can the A2 mini change its IP?	It needs to be upgraded to the latest firmware from the official website, then modified via SDK commands.
2	The installation methods for the A2 mini.	<ol style="list-style-type: none">1. Upside Down Mode: Mounting with the camera base horizontally and vertically upward relative to the fuselage.2. Upright Mode: Mounting with the camera base horizontally and vertically downward relative to the fuselage.3. Nose Mode: Mounting with the camera base horizontally and sideways relative to the fuselage.
3	The A2 mini connected to the LAN2 port of the UniRC7 air unit cannot be controlled via channel 15.	This method is currently not supported. Please connect to the LAN1 port as a priority.
4	Can the A2 mini operate with the transparent casing removed?	It is not recommended to use it this way, as it will reduce the protective performance of the gimbal camera.
5	Can the A2 mini connect to a computer for video output?	As long as the gimbal's network port can connect to the computer or achieve network communication with the computer, it will work.
6	What should I do if I forget the IP or port after changing it on the A2 mini?	Access the backup IP at 192.168.100.254 via the network and send the corresponding SDK command to change or reset the IP.
7	The weight of the A2 mini.	85g
8	Can the A2 mini pan left and right?	No, this gimbal is a single-axis gimbal and can only control pitch movement.
9	The name of the network port interface model on the A2 mini.	The interface model is GH with a pitch of 1.25mm.