






AIR UNIT RECORDING HDMI INPUT CONVERTER USER MANUAL

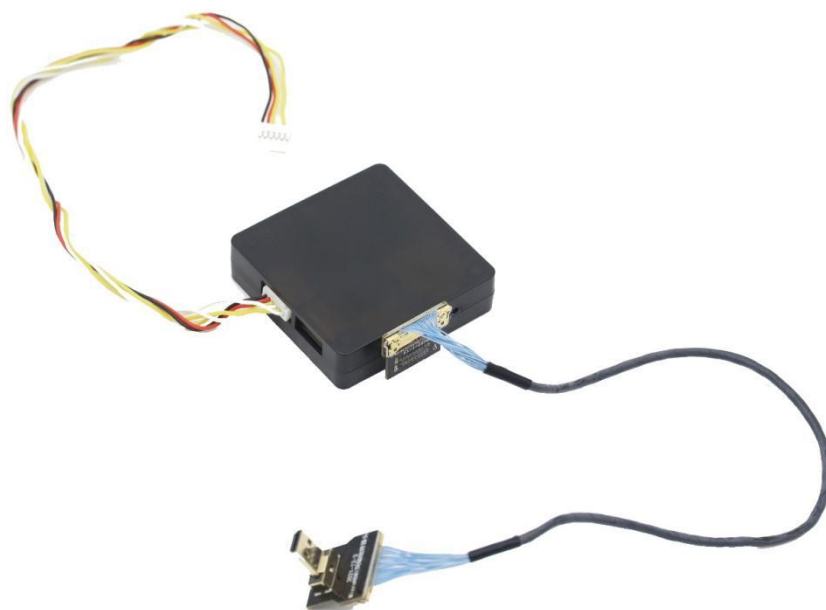

SIYI Technology (Shenzhen) Co., Ltd.

siyi.biz/en

Contact Us: **SIYI Official Website** (<https://siyi.biz/en>)

SIYI User Group - Facebook	
Facebook	
LinkedIn	
YouTube	

Manual Version Update Record

Version Number	Update Date	Update Content
1.0	2022.10	Initial version
1.1	2024.12	Change the manual layout format, no content modification.

CONTENT

READ TIPS	5
Icons	5
Safety	5
Storage/Carrying/Recycling	5
1 INTRODUCTION	7
1.1 Ports and Definitions	7
1.2 Technical Specification	8
2 CONFIGURE THE CONVERTER	9
2.1 Check IP	10
2.2 Change IP	10
3 VIDEO RECORDING	12
4 IMAGE TRANSMISSION AND DISPLAY	13
4.1 Connect to HM30 HD Image Transmission System	13
4.2 Connect to MK15 Mini Handheld Smart Controller	13
4.3 Connect to Third-Party Image Transmission Systems	14
4.4 Solutions to No Image from the Converter	15
4.4.1 Video Output to An Android Device	16
4.4.2 Video Output to A Windows Device	17
4.5 Common IP Addresses	19
5 SIYI FPV APP	20
5.1 Settings	22
5.2 Link Status	23
5.3 Gimbal Camera	24
5.4 About SIYI FPV	25
6 Firmware Upgrade and Configuration	27
7 After-sale Service	29

READ TIPS

Icons

Please pay more attention to content indicated with the following marks:



DANGER Dangerous manipulation probably leads to human injuries.



WARNING Warnings on manipulation possibly leads to human injuries.



CAUTION Cautions on what manipulation may lead to property loss.



Prohibited



Mandatory



Mark

Safety

Irregular or irresponsible manipulations to the device may cause damage, property loss, or human injuries. Users under 14 years' old should follow an experienced trainer's guide. Disassembling or modification to the system is prohibited without permission from its manufacturer, SIYI Technology.

Storage/Carrying/Recycling

When your SIYI products are stand idle, or you are bringing it outdoors, or the system

reached service life, then please do read the precautions below.



CAUTION

Always place your SIYI products at places where babies or kids do not reach.



DANGER

SIYI products should be placed in places with below conditions:

Not too hot (above 60°C) or too cold (under -20°C).


Not under direct sunshine or too dusty or too wet.

Not on an unstable holder which lacks solid supports or may cause vibration.

Not nearby steam or other heat sources.

1 INTRODUCTION

1.1 Ports and Definitions

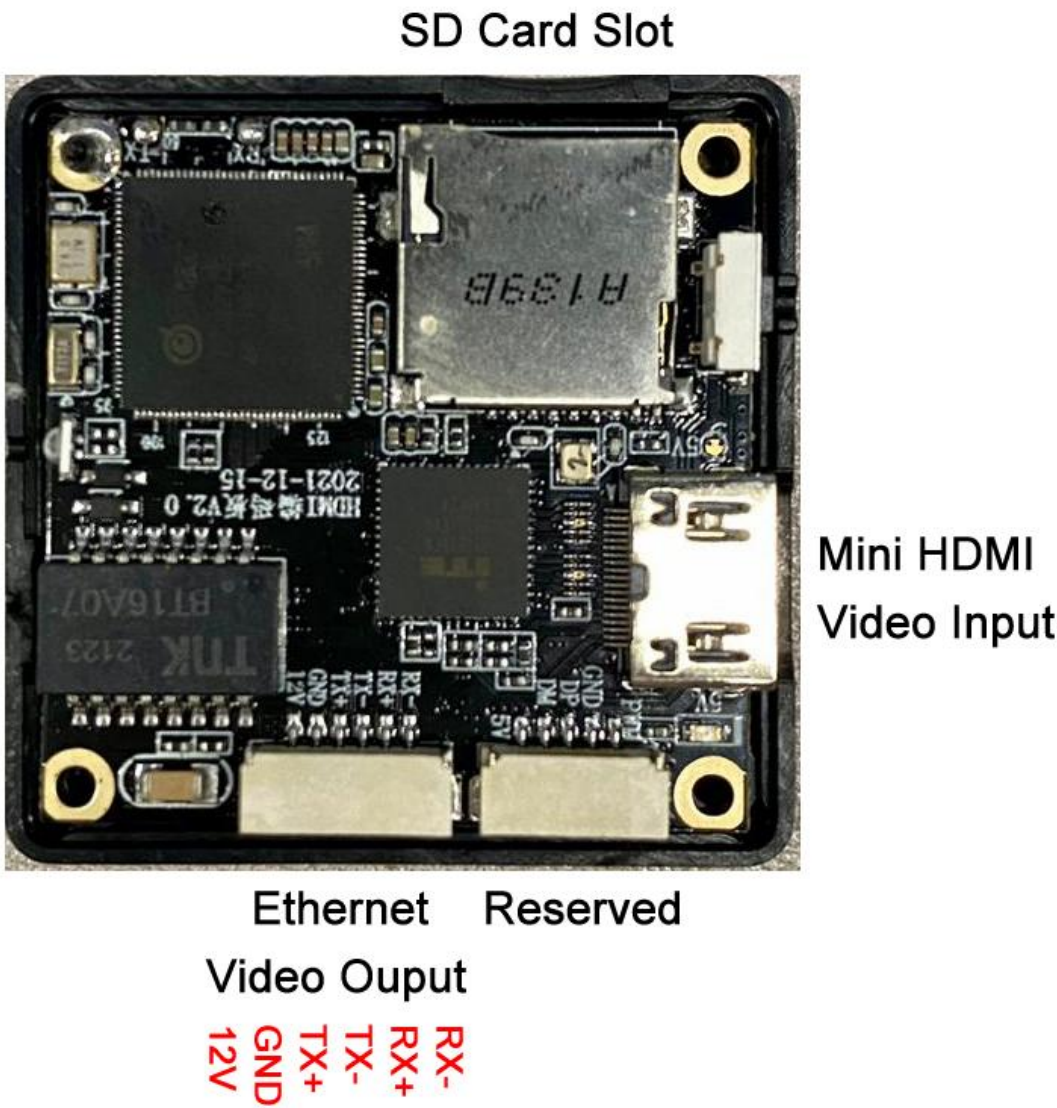

1.2 Technical Specification

Overall

Video Input Port	Mini HDMI
Video Output Port	Ethernet
Working Voltage	12 V
Power Consumption	3 W
TF Card Recording Resolution	1080p (1920 x 1080) @ 30 fps 720p (1280 x 720) @ 30 fps
Video Storage Bitrate	12 Mbps
Supported File System	FAT32
Video File Format	H.264
Supported TF Card Type	MicroSD Class10, max 32 GB
Working Temperature	-10 ~ 50 °C
Dimension	42 x 41 x 11 mm
Weight	26g


2 CONFIGURE THE CONVERTER

If it is the first time that you are going to configure the converter, please do flash the converter firmware once through SD card, so you can see the files for converter configuration in the SD card.

Mark

Please refer to the chapter 6 of this manual for camera firmware update steps.

After flashing converter firmware by SD card, we will see two “.txt” files in the root category of the SD card.

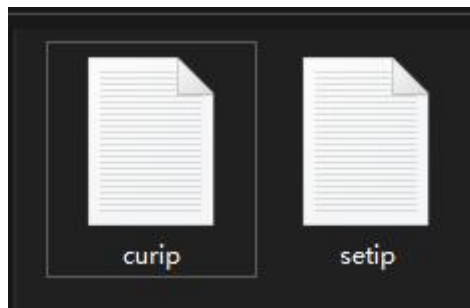

“curip.txt” for checking the current IP addresses.

“setip.txt” for customers to change IP addresses.

2.1 Check IP

Open the “curip.txt” file, you will see the current IP addresses of the converter.



“192.168.144.25” is the factory default converter IP addresses.

2.2 Change IP

Open the “setip.txt” file, input the IP addresses you need after “IP = ”.



Then insert the SD card to the converter and restart it. After waiting for 3 to 5 minutes, the IP addresses will be flashed into the converter. Then we restart the converter again to finish changing IP addresses.

Mark

When you are using the converter with SIYI MK15 or HM30 system, please do configure its IP addresses within the “192.168.144.X” band and avoid conflict with existing IP addresses in the system. For detail, please refer to the “Common IP Addresses” chapter in MK15 and HM30 user manual.

3 VIDEO RECORDING

Air unit HDMI input converter supports video recording function through “SIYI FPV” app.

When the SIYI FPV app is running, tap the “Record” button on the touchscreen can start video recording, and the “Record” button will change to “Recording” button.

Tap the “Recording” button will stop video recording.

Mark

SD / TF card should be inserted to the converter before recording.

Please use v404 and above version of SIYI FPV app to experience video recording function.

4 IMAGE TRANSMISSION AND DISPLAY

Air unit HDMI input converter is an HDMI converter module, it can connect to SIYI image transmission systems and third-party image transmission systems.

4.1 Connect to HM30 HD Image Transmission System

Use the converter to connect HM30 air unit's video input port and the camera's HDMI output port, then use mobile device to connect HM30 ground unit and run SIYI FPV app. In camera settings of SIYI FPV app, choose "SIYI Camera 1" or the default RTSP addresses. After powering on HM30 ground unit and air unit and binding them, we will see image from the converter in SIYI FPV app.



HM30 HD Image Transmission System support multiple ways of displaying and outputting video stream. Please refer to the Chapter 6 of HM30 user manual for details.

4.2 Connect to MK15 Mini Handheld Smart Controller

Use the converter to connect MK15 air unit's video input port and the camera's HDMI output port, then turn on MK15 remote controller and run SIYI FPV app. In camera settings of SIYI FPV app, choose "SIYI Camera 1" or the default RTSP addresses. After

powering on MK15 air unit and binding it to the remote controller, we will see image from the converter in SIYI FPV app.

4.3 Connect to Third-Party Image Transmission Systems

Air unit HDMI input converter can output video stream to any third-party image transmission systems which provide Ethernet port and are compatible with RTSP video stream.

Before using the camera in this way, it is necessary to prepare the video cable for connection between the converter and the image transmission system.



CAUTION

The converter's output port's "RX-" pinout should connect to the image transmission system video port's "RX-" pinout, and "RX+" pinout to "RX+" pinout. Do not cross the pinouts, otherwise it will cause damage to the device.

The converter's working voltage is from 12 V DC, please make sure that the power voltage input is normal before wiring.

Steps

1. Power the air unit of the image transmission system and bind it with the ground unit.

2. Use the video cable to connect the converter's video output port and the image transmission system's video input port.
3. Open video display software and input the converter's RTSP addresses (rtsp://192.168.144.25:8554/main.264), if the video displays normally, connection is successful.

4.4 Solutions to No Image from the Converter

If the converter failed to output video or the video stream cannot be displayed properly, please follow the steps below to investigate possible reasons.

1. Confirm if the image transmission system ground unit is bound with the air unit and confirm if the converter is connected to the air unit.
2. Open "SIYI FPV" app and check if the Camera IP is "SIYI Camera 1" (when camera IP addresses are 192.168.144.25) or "SIYI Camera 2" (when camera IP addresses are 192.168.144.26).
3. Check if the current IP addresses of the converter is "192.168.144.25" or "192.168.144.26". If not, please re-configure the IP addresses.



Mark

In SIYI FPV App's Camera IP menu, customers can also input the full RTSP addresses of the converter to display video stream.

If the video stream still does not display, please follow the steps below and make a deep investigation according to the video output mode and the video display device you use.

4.4.1 Video Output to An Android Device

1. Input the converter's default IP addresses "192.168.144.25" in the "Ping Tools" app and check if the network communication is successful. If there is a response, then check if the RTSP address in the SIYI FPV app is correct.



Successful Network Communication



Network Communication Failed

2. If the network communication is failed, then please check if the communication between the image transmission system's ground unit and the air unit is successful. If it is, then please check if the video cable between the converter and the image transmission system's air unit is good, and if the voltage input is in normal range.

4.4.2 Video Output to A Windows Device

1. Use the “Win + R” key combo to wake up the “Run” program and input the command “cmd”.

```
C:\Windows\system32\cmd.exe
Microsoft Windows [版本 10.0.19042.804]
(c) 2020 Microsoft Corporation. 保留所有权利。

C:\Users\Administrator>ping 192.168.144

正在 Ping 192.168.0.144 具有 32 字节的数据:
Control-C
^C
C:\Users\Administrator>ping 192.168.144.25

正在 Ping 192.168.144.25 具有 32 字节的数据:
来自 192.168.144.25 的回复: 字节=32 时间=9ms TTL=64
来自 192.168.144.25 的回复: 字节=32 时间=3ms TTL=64
来自 192.168.144.25 的回复: 字节=32 时间=4ms TTL=64
来自 192.168.144.25 的回复: 字节=32 时间=3ms TTL=64
```

Successful Network Communication


```
C:\Windows\system32\cmd.exe
正在 Ping 192.168.144.25 具有 32 字节的数据:
Control-C
^C
C:\Users\Administrator>ping 192.168.144.25

正在 Ping 192.168.144.25 具有 32 字节的数据:
请求超时。
请求超时。
来自 192.168.144.153 的回复: 无法访问目标主机。
来自 192.168.144.153 的回复: 无法访问目标主机。

192.168.144.25 的 Ping 统计信息:
    数据包: 已发送 = 4, 已接收 = 2, 丢失 = 2 (50% 丢失),
C:\Users\Administrator>
```

Network Communication Failed

2. Input the converter's default IP addresses "192.168.144.25" and press the "Enter" key to check if communication is successful. If it is successful, please check if the RTSP addresses in the RTSP player is correct or try to switch to other video players.

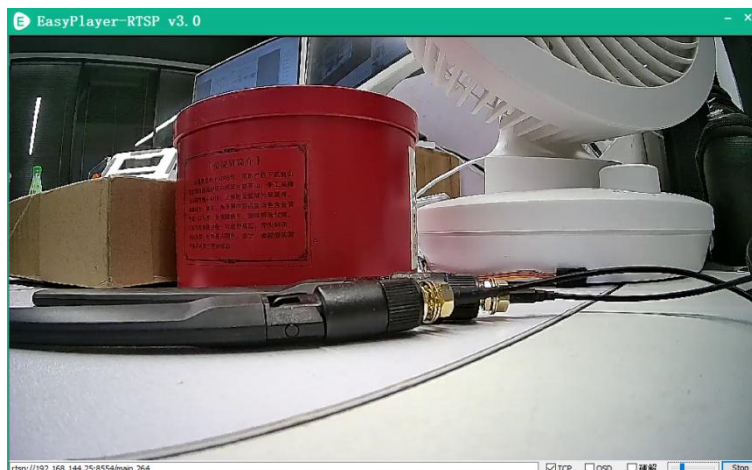

3. If the network communication is failed, then please check if the communication between the image transmission system's ground unit and the air unit is successful. If it is, then please check if the video cable between the camera and the image transmission system's air unit is good, and if the voltage input is in normal range.

Mark

If you have done investigation by following all steps above, but the reason is still not located, please contact your dealer or contact SIYI Support immediately.

4.5 Common IP Addresses

Air Unit HDMI Input Converter's Default IP Addresses: 192.168.144.25

Air Unit HDMI Input Converter's Default RTSP Addresses:

rtsp://192.168.144.25:8554/main.264

SIYI FPV App's "SIYI Camera 1" IP Addresses: 192.168.144.25

SIYI FPV App's "SIYI Camera 2" IP Addresses: 192.168.144.26

5 SIYI FPV APP

SIYI FPV is an Android application developed by SIYI to configure multiple SIYI devices for image transmission settings, camera settings, video stream display, and link status monitor.

Mark


The manual is edited based on SIYI FPV App v2.5.404.

SIYI FPV App can be download from the SIYI official links.

SIYI FPV App compatible SIYI devices.

- MK15 / MK15E Mini HD Handheld Smart Controller
- HM30 Full HD Image Transmission System
- Air Unit Recording HDMI Input Converter
- R1 / R1M HD Recording FPV Camera
- ZR10 2K QHD 30X Hybrid Zoom Gimbal Camera

SIYI FPV App OSD Information Definition

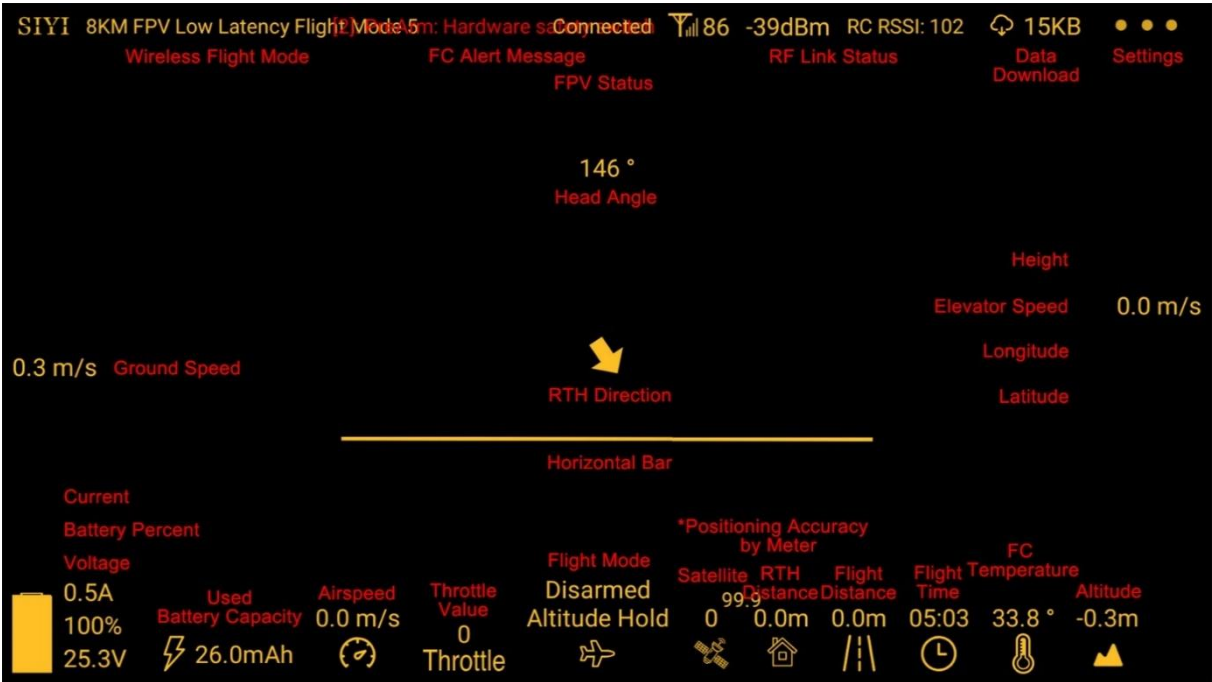


SIYI FPV Camera Function Icon Definition



5.1 Settings

In the “Settings” page, you can configure camera IP Addresses, configure application interface, switch decoding type.

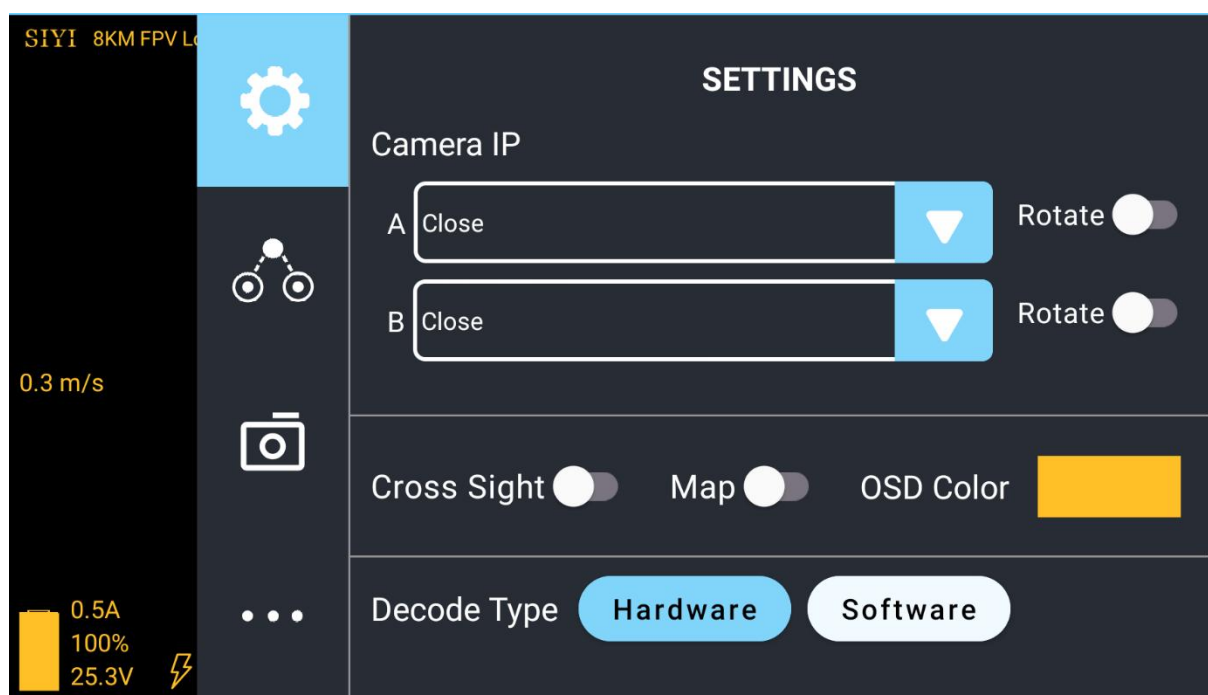

About Settings

Camera IP: Select SIYI Camera 1 and SIYI Camera 2, or input camera RTSP addresses manually, or disable image. The “Rotate” buttons can rotate the image in 180 degrees.

Cross Sight: Display a cross sight in the center of the image.


Map: Display the flight map at the left-bottom corner of the app.

OSD Color: Adjust the color of all OSD information.

Decoding Type: Switch between “Hardware Decoding” and “Software Decoding”. Please refer to your video input device to choose the decoding type with the best performance.

5.2 Link Status

Display the link status directly over the FPV image.

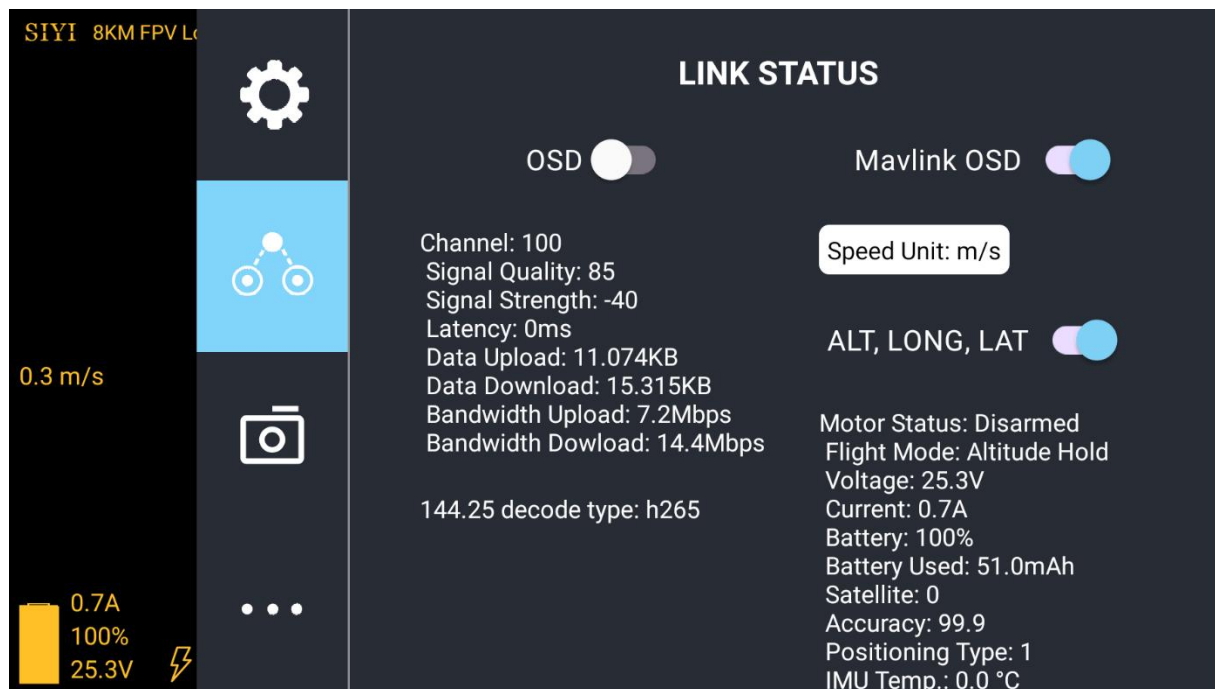

About Link Status

OSD: Enable / disable standard OSD information.


Mavlink OSD: Enable / disable Mavlink OSD information.

Speed Unit: Switch speed unit between meter per seconds and kilometer per hour.

Longitude and Latitude: Enable / disable information.

5.3 Gimbal Camera

Configure the basic functions for SIYI gimbal cameras and cameras.

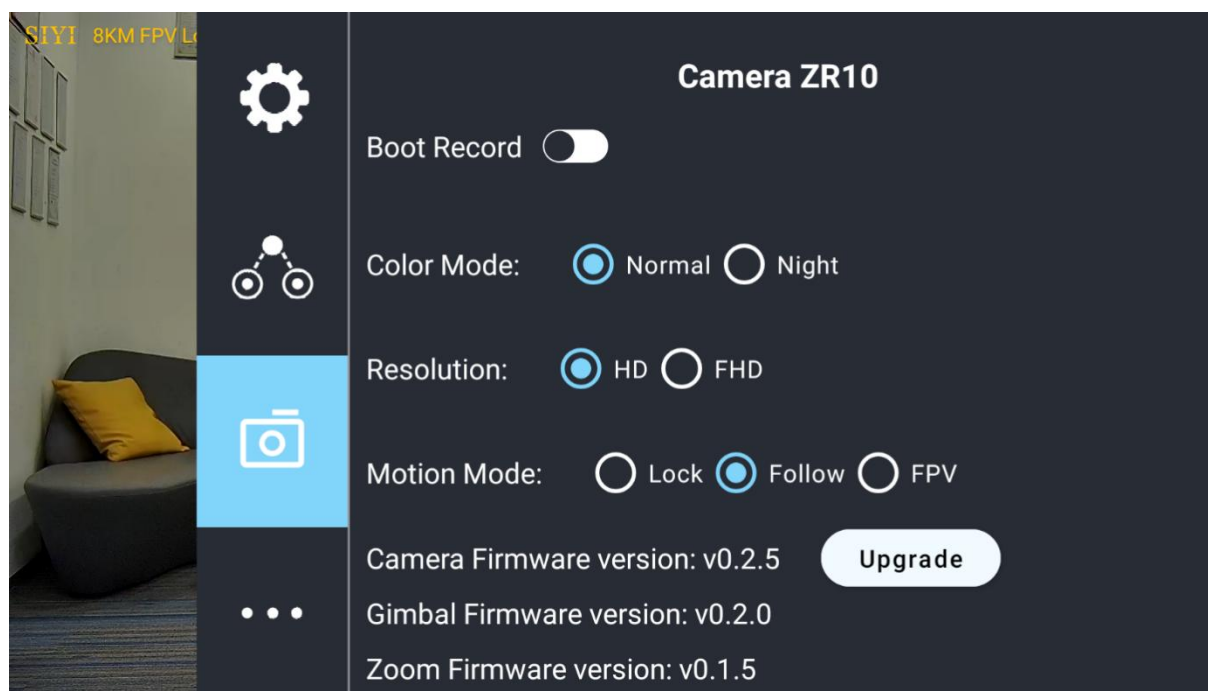

About Gimbal Camera

Auto Record: Turn on / off automatically video recording by TF card on gimbal camera start.

Color Mode: Switch gimbal camera's color mode between Daylight and Night Vision.

Resolution: Switch camera real-time video streaming resolution between HD (720p) and Full HD (1080p).

Motion Mode: Switch gimbal motion mode between Lock Mode, Follow Mode, and FPV Mode. Under Lock Mode, when the aircraft is rotating around yaw axis, gimbal won't follow to rotate until reaching to its limit position. Under Follow Mode, gimbal will follow

the aircraft's rotation around yaw axis. Under FPV Mode, when the aircraft is rotating around yaw axis, gimbal won't follow to rotate until reaching to its limit position, and if the aircraft can rotate around roll axis, gimbal will follow.

Camera Firmware Version: Display the current camera firmware version.

Gimbal Firmware Version: Display the current gimbal firmware version.

Zoom Firmware Version: Display the current gimbal firmware version.





Mark


After switching camera resolution, the gimbal camera should be restarted to implement the change.

5.4 About SIYI FPV

Displays the software version of SIYI FPV and common contact information of SIYI Technology.

SIYI 8KM FPV L





ABOUT

App Version

V2.5.8.404.a2f68b6

Email

support@siyi.biz


TEL

400 838 2918

Website

www.siyi.biz

Facebook



6 Firmware Upgrade and Configuration

R1 / R1M camera can use SD / TF card for camera firmware update.

Before upgrading, it is necessary to prepare the tools, software, and firmware below.

- SD / TF card



Customers should prepare the above tools.

- R1 / R1M camera firmware




Above software and firmware can be downloaded from the R1 / R1M product page in SIYI Official Store (<https://shop.siyi.biz>), or from the R1 / R1M Google Drive Link, or got from your dealer.

R1 / R1M Recording Camera Google Drive Link:

<https://drive.google.com/drive/folders/169FRyJPVFci6Ojg7KgH23l6kyMi70ghG?usp=sharing>

Firmware Upgrade Steps

1. Save the camera firmware's ".bin" file to the SD / TF card's root directory and do not change the file name.

名称	修改日期	类型	大小
 ZR10_UpgradeSD.bin	2022/7/5 16:16	BIN 文件	12,085 KB

2. Restart the camera and wait for three to five minutes, camera firmware will be flashed automatically.
3. Run SIYI FPV app to check if the camera firmware is updated or check from the "curip.txt" file in the SD card just used.

7 After-sale Service

Please visit the SIYI Technology support page at [Service and Support - SIYI Technology | Empowering and Building an Intelligent Robot Ecology](#) for the latest after-sales and warranty information.