

**SIYI**

SIYI RTK Positioning and Orientation Module User  
Manual v1.0

# **SIYI RTK Positioning and Orientation Module User Manual**



SIYI Technology (Shenzhen) Co., Ltd.

[siyi.biz/en](http://siyi.biz/en)

**Thank you for purchasing SIYI Technology products.**


The SIYI RTK family proudly introduces the new dual-antenna high-precision full-system all-frequency positioning and orientation module. With advanced performance and top-notch accuracy, it is compact in size and boasts extremely low power consumption.

Equipped with the RM3100 industrial-grade magnetometer, this module supports single-module dual-antenna direction finding and maintains excellent anti-interference performance even in complex electromagnetic environments. It provides high-precision control responses and enables precise operations for unmanned systems, supporting flight control systems and empowering the intelligent robotics ecosystem with high-precision positioning, orientation, and autonomous navigation control.

To ensure you have a great product experience, please carefully read the user manual before installation. This manual will help you resolve most of your usage questions. For additional assistance, you can visit SIYI Technology's official website ([www.siyi.biz](http://www.siyi.biz)), call SIYI Technology's official after-sales service center at 400-838-2918, or email [support@siyi.biz](mailto:support@siyi.biz) to consult with SIYI

Technology engineers about product-related knowledge and to provide feedback on product issues.

Contact Us: **SIYI Official Website** (<https://siyi.biz/en>)

SIYI User Group - Facebook	
Facebook	
LinkedIn	
YouTube	

## User Manual Version Update History

<b>Version</b>	<b>Update Date</b>	<b>Update Content</b>
<b>1.0</b>	2024.8	Initial release


## Content


<b>Read Tips</b> .....	<b>5</b>
<b>Icons</b> .....	<b>5</b>
<b>Safety</b> .....	<b>5</b>
<b>Storage / Carrying / Recycling</b> .....	<b>6</b>
<b>Chapter 1: Product Overview</b> .....	<b>8</b>
<i>1.1 Product Features</i> .....	8
<i>1.2 Interfaces And Definitions</i> .....	9
<i>1.3 Technical Specifications</i> .....	10
<i>1.4 Item List</i> .....	11
<i>1.5 Status Indicator Definitions</i> .....	12
<b>Chapter 2: Before Use</b> .....	<b>14</b>
<i>2.1 Installation And Fixing</i> .....	14
<i>2.1.1 F9P Rtk Base Station</i> .....	14
<i>2.1.2 Mobile End (SIYI Rtk Positioning And Orientation Module)</i> .....	15
<b>Chapter 3: Dual-Antenna Orientation (Compass Replacement)</b> .....	<b>18</b>
<b>Chapter 4: Centimeter-Level Positioning With Rtk</b> .....	<b>24</b>
<i>4.1 Base Station Connection Instructions</i> .....	25
<b>Chapter 5: Using Network Rtk With SIYI Handheld Ground Station</b> .....	<b>30</b>
<b>Chapter 6: After-Sale Service</b> .....	<b>34</b>
<i>6.1 Repair Service</i> .....	34
<i>6.2 Warranty</i> .....	35
<i>6.2.1 7-Day Return &amp; Refund</i> .....	35
<i>6.2.2 15-Day Replacement</i> .....	37
<i>6.2.3 1-Year Warranty Repair</i> .....	39


## Read Tips

### Icons

Please pay more attention to content indicated with the following marks:

 **DANGER** Dangerous manipulation probably leads to human injuries.

 **WARNING** Warnings on manipulation possibly leads to human injuries.

 **CAUTION** Cautions on what manipulation may lead to property loss.

 **Prohibited**

 **Mandatory**

 **Mark**

### Safety

The SIYI RTK Positioning and Orientation Module is designed and manufactured for professional application scenarios. Necessary adjustments have been completed before leaving the factory; please do not disassemble or modify its structure. The F9P RTK

system is highly precise, and operators must possess certain basic skills to handle it. Please use the module with caution. SIYI Technology will not be held responsible for any unnecessary damage to the product, economic loss, or even personal injury caused by improper or irresponsible use of this product. Minors must use this product under the supervision and guidance of professionals.

SIYI products are designed for commercial applications and are strictly prohibited from being used for military purposes. Unauthorized disassembly or modification of this product without the consent of SIYI Technology is forbidden.

## **Storage / Carrying / Recycling**

When your SIYI product is left unused, or you are bringing it outdoors, or the product life has expired, please do read the below precautions.

### **Danger**

Always place your SIYI products at places where babies or kids do not reach.

SIYI products should be placed in places which are too hot (above 60°C)

or too cold (under  $-20^{\circ}\text{C}$ ).

## **Caution**

SIYI products should not be placed in places under direct sunshine or too dusty or too wet.

Carrying or transporting SIYI products should avoid vibration or shatter by which components may break.



# Chapter 1: Product Overview

## 1.1 Product Features

### **Full-System, Full-Frequency RTK Positioning**

SIYI's RTK positioning and orientation module supports full-system, full-frequency high-precision positioning, including BeiDou, GPS, GLONASS, Galileo, and QZSS. This significantly enhances positioning accuracy and reliability.

### **RM3100 Industrial-Grade Magnetometer**

Equipped with the RM3100 magnetometer, SIYI's RTK positioning and orientation module greatly improves magnetic field measurement resolution, reduces noise levels, and expands measurement range, providing the positioning system with excellent anti-interference capability.


### **Single Module with Dual-Antenna Orientation**

The system enables orientation determination using just one module connected to two antennas, replacing the traditional magnetometer and ensuring stable operation in complex electromagnetic environments.

## Compact and Lightweight Design

Engineered specifically for the intelligent robotics ecosystem, the module embodies minimalist design, achieving millimeter-level precision and ultralight weight.

## 1.2 Interfaces and Definitions

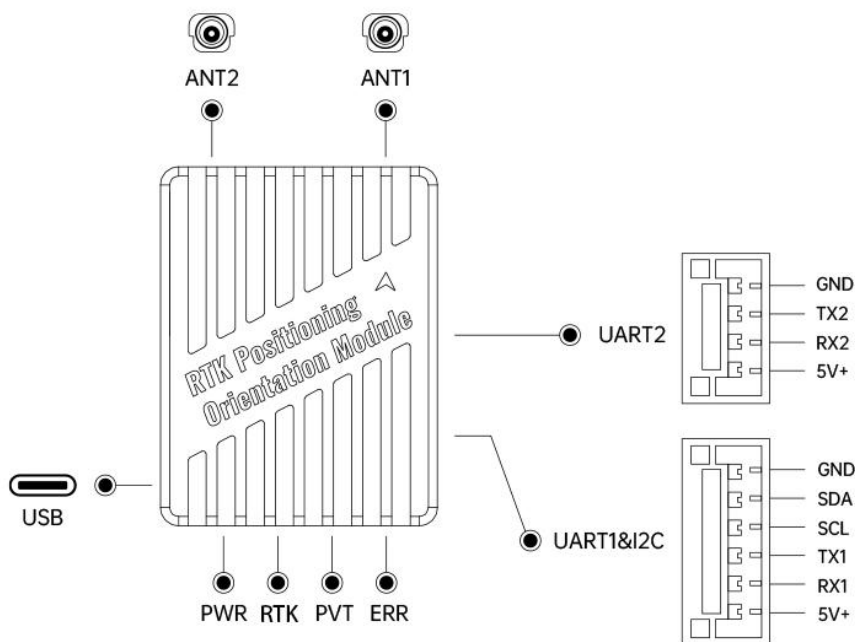

- |   |                                  |
|---|----------------------------------|
| <b>UART1&amp;I2C:</b> Autopilot Communication | <b>PWR:</b> Power Indicator      |
| <b>UART 2:</b> Autopilot Communication        | <b>RTK:</b> RTK Status Indicator |
| <b>ANT1/2:</b> Antenna Connector              | <b>PVT:</b> PVT Status Indicator |
| <b>USB (Type-C):</b> PC Configuration         | <b>ERR:</b> ERR Status Indicator |

## 1.3 Technical Specifications

### Hardware Specifications

<b>GNSS Receiver</b>	Unicore UM982
<b>Electronic Compass</b>	PNI RM3100
<b>Satellite Navigation System</b>	GPS GLONASS BeiDou Galileo QZSS
<b>Satellite Frequency Band</b>	<p><b>Antenna 1:</b> BDS:B1I、 B2I、 B3I GPS:L1C/A、 L2P (Y) /L2C、 L5 GLONASS:L1、 L2 Galileo: E1、 E5a、 E5b QZSS:L1、 L2、 L5</p> <p><b>Antenna 2:</b> BDS:B1I、 B2I、 B3I GPS:L1C/A、 L2C GLONASS:L1、 L2 Galileo: E1、 E5b QZSS:L1、 L2</p>

### Overall Performance

<b>Positioning Accuracy</b>	<p><b>Single Point Positioning:</b> Horizontal 1.5M/ Elevation 2.5m</p> <p><b>GPS (Differential GPS):</b> Horizontal: 0.4M+1PPM/ Elevation: 0.8m+1PPM</p> <p><b>RTK:</b></p>
-----------------------------	--

	Horizontal 0.8cm+1PPM Elevation: 1.5cm+1PPM
<b>Directional Accuracy (Dual-Module Measurement)</b>	Baseline: 1m, Directional Accuracy: 0.2 degrees
<b>Maximum Number of Satellites</b>	Single : 28 + RTK:50 +
<b>Differential Data Format</b>	RTCM3.X
<b>Time to First Fix (TTFF)</b>	Cold Start: <30s, Hot Start
<b>Antenna Gain</b>	Mobile End: 2 dBi Base Station End: 5.5 dBi
<b>Data Refresh Rate</b>	5Hz (default); Maximum 20Hz
<b>Interface Type</b>	2 x UART 1 x USB (Type-C)
<b>Antenna Interface Type</b>	MMCX
<b>Operating Voltage</b>	4.5 ~ 5.5 V
<b>Power Consumption</b>	1 W
<b>Operating Temperature</b>	-30 ~ 75 °C
<b>Product Dimensions</b>	40mmx30.5mmx15mm
<b>Product Weight</b>	22.8g (excluding antenna)

## 1.4 Item List

1 x SIYI RTK Positioning and Orientation Module

2 x Quadruple Helix Antennas

2 x Quadruple Helix Antenna Feedlines (SMA female to MMCX  
right-angle male, feedline length: 550mm)

1 x Type-C to USB Data Cable

1 x UART1 to GPS Module Connection Cable


(for connecting the UART1 interface of the RTK mobile module to  
the flight controller GPS module)

1 x UART1 to TELEM4 Connection Cable

(for connecting the UART1 interface of the RTK mobile module to  
the flight controller TELEM4 interface)


## **1.5 Status Indicator Definitions**

### **Power Indicator Light**

 Red Light On: Module is powered normally

 Red Light Off: Module has no power

### **RTK Status Indicator Light**

 Blue Light On: Entered RTK status

Blue Light Off: Not in RTK status

### **PVT Status Indicator Light**

Green Light On: Positioning successful

Green Light Off: Not positioned

### **ERR Status Indicator Light**

Red Light On: Module error

Red Light Off: Module is normal


### **Note**

The RTK status indicator light is only active on the mobile end when the system enters RTK status. The RTK status indicator light on the base station end will not light up.

## Chapter 2: Before Use

### 2.1 Installation and Fixing

#### 2.1.1 F9P RTK Base Station

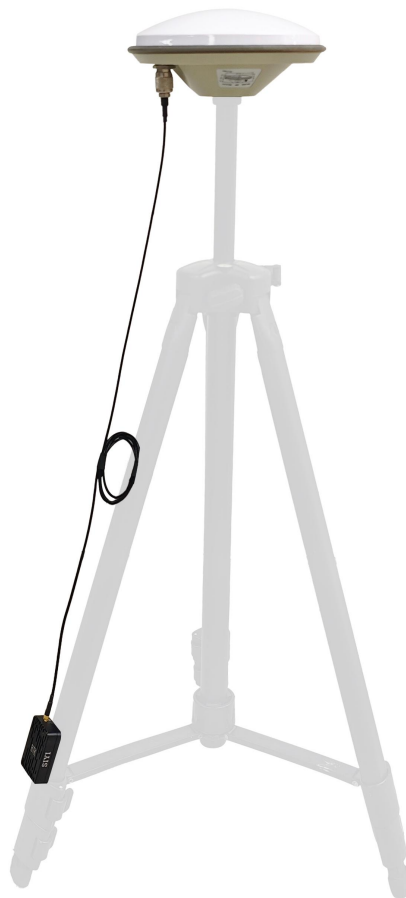


Refer to the image above to securely mount the RTK base station and the mushroom antenna on a tripod, ensuring that the antenna feed line is properly connected.

 Note

The tripod should be provided by the user.

Please ensure that there are no obstacles or sources of interference around the RTK antenna to avoid affecting the convergence time and positioning accuracy.

## 2.1.2 Mobile End (SIYI RTK Positioning and Orientation Module)

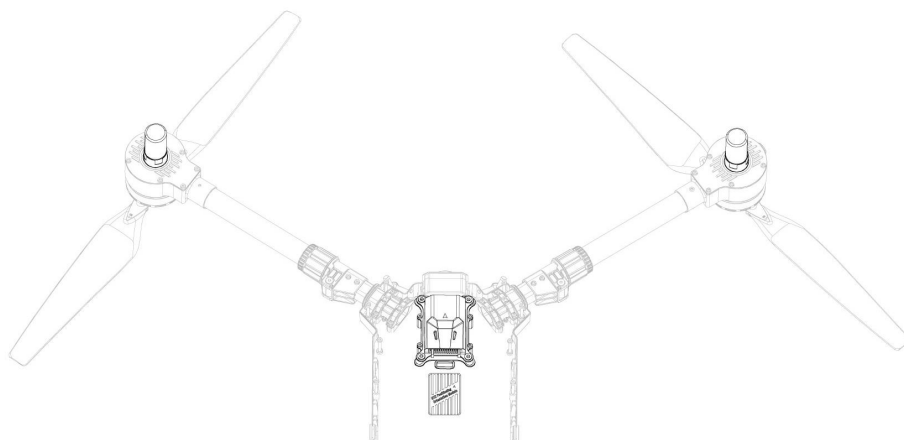

Refer to the image above to securely mount the RTK mobile end on the aircraft body, ensuring it does not wobble. The arrow on the RTK module should align with the installation direction of the



flight controller (the aircraft's nose direction).

 Note

The SIYI RTK Positioning and Orientation Module is equipped with a built-in RM3100 compass. To ensure stable operation of the device, the module should be installed away from sources of magnetic interference.

### **Installation of Mobile End Antenna Bracket**

If the frame design does not allow for the RTK mobile end antenna to be installed in the specified position, refer to the image below. Use a mounting bracket to securely fix the four-arm spiral antenna to the aircraft body, ensuring it does not wobble. The arrow on the RTK module should align with the installation direction of the flight controller (the aircraft's nose direction).




## Note


Please avoid obstructing the RTK antenna, as this may affect positioning performance.

## Chapter 3: Dual-Antenna Orientation (Compass Replacement)

When dual RTK antennas are installed, they can replace the device's compass and enable dual-antenna orientation functionality.

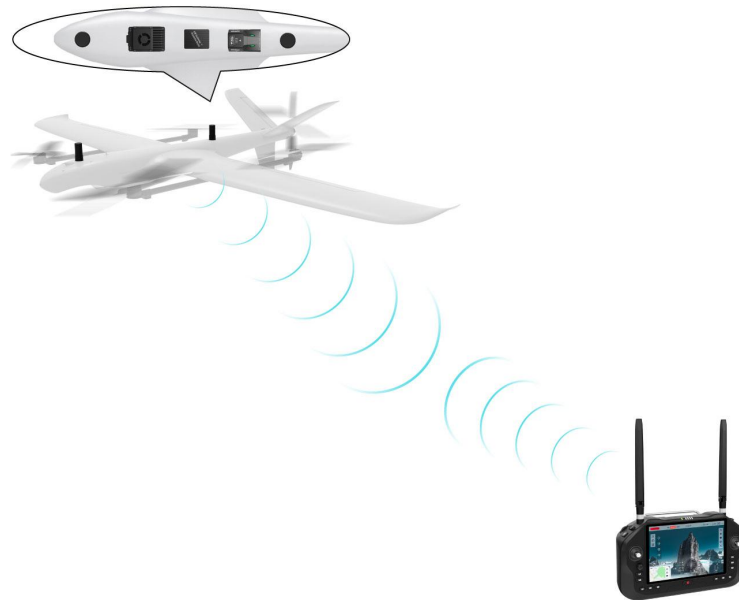

## Instructions for Use

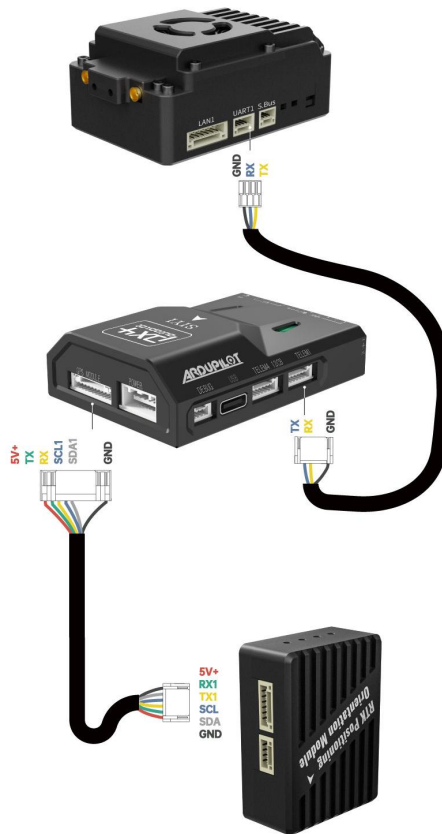

Refer to the diagram above to connect the RTK mobile module to the flight controller, while the flight controller is connected to the airborne data link.



ArduPilot firmware version 4.4.0 or above is required.


The relevant parameter configuration for the flight controller and the RTK mobile module is as follows:

Using Serial Port 3 as an example:

Set SERIAL3\_PROTOCOL = 5 (GPS)

Set GPS1\_TYPE = 25 (Unicore Moving Baseline)

If only using the main antenna for positioning and not utilizing the orientation function, set GPS1\_TYPE = 24 (Unicore Master)

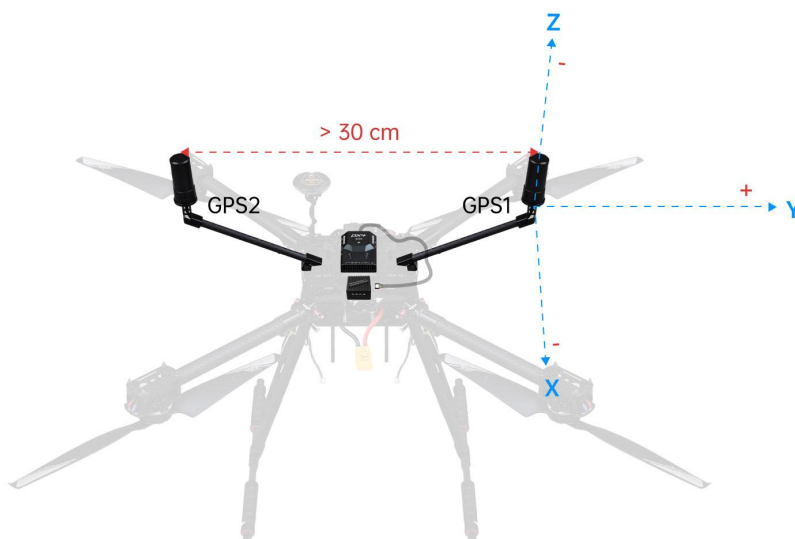

Set the position of the main and secondary antennas for the SIYI RTK Positioning and Orientation Module:

GPS\_MB1\_TYPE = 1 (The offset of the mobile baseline main

antenna relative to the secondary antenna. After modification, restart to display the next parameter.)

GPS\_MB1\_OFS\_X: The X-axis offset of the main antenna relative to the secondary antenna (distance in meters). If the main antenna is in front of the secondary antenna, the value is positive; otherwise, it is negative.

GPS\_MB1\_OFS\_Y: The Y-axis offset of the main antenna relative to the secondary antenna (distance in meters). If the main antenna is to the right of the secondary antenna, the value is positive; otherwise, it is negative.

GPS\_MB1\_OFS\_Z: The Z-axis offset of the main antenna relative to the secondary antenna (distance in meters). If the main antenna is lower than the secondary antenna, the value is positive; otherwise, it is negative.

### Main Antenna Positioning Offsets

GPS\_POS1\_X: The X-axis offset of the main antenna relative to the flight controller (distance in meters). If the main antenna is in front of the flight controller, the value is positive; otherwise, it is negative.

GPS\_POS1\_Y: The Y-axis offset of the main antenna relative to the

flight controller (distance in meters). If the main antenna is to the right of the flight controller, the value is positive; otherwise, it is negative.

GPS\_POS1\_Z: The Z-axis offset of the main antenna relative to the flight controller (distance in meters). If the main antenna is lower than the flight controller's position, the value is positive; otherwise, it is negative.

 **Note**

The horizontal distance between the main and secondary antennas must be at least 30 centimeters; otherwise, it will affect the orientation accuracy.

### **Verifying Dual-Antenna Orientation**

Open the ground station and check whether the GPS\_YAW heading matches the actual heading. If the headings are consistent, it indicates that the dual-antenna orientation configuration is successful. If they do not match, there may be an error in the settings for GPS\_POS1 or GPS\_MB1\_OFS.

Quick	Actions	Messages	Preflight	Gauges	Drone ID	Transponder	Status	Servo/Relay
		esc8_curr	0	gen_speed	0	gx3	0	
		esc8_rpm	0	gen_status	0	gy	0	
		esc8_temp	0	gen_voltage	0	gy2	-1	
		esc8_volt	0	GeoFenceDist	99999	gy3	0	
		esc9_curr	0	gimballat	0	gyrosq	3	
		esc9_rpm	0	gimballng	0	gyrosq2	1.41421	
		esc9_temp	0	GimballPoint		gyrosq3	0	
		esc9_volt	0	glide_ratio	NaN	gz	0	
		esc10_curr	0	gps_h_acc	1.042	gz2	0	
		esc10_rpm	0	gps_h_acc2	0	gz3	0	
		esc10_temp	0	gps_hdg_acc	0	HomeAlt	0	
		esc10_volt	0	gps_hdg_acc2	0	HomeLocation	0,0,0	
		esc11_curr	0	gps_hdgop	0.59	horizondist	2038.34	
		esc11_rpm	0	gps_hdgop2	0	hwvoltage	5.176	
		esc11_temp	0	gpsstatus	4	hygrohumi1	0	
		esc11_volt	0	gpsstatus2	0	hygrohumi2	0	
		esc12_curr	0	gpstime	4/19/20	hygrotemp1	0	
		esc12_rpm	0	gpsv_acc	2.089	hygrotemp2	0	
		esc12_temp	0	gpsv_acc2	0	i2errors	0	
		esc12_volt	0	gpsvel_acc	0.253	imu1_temp	45.02	
		failsafe	False	gpsvel_acc2	0	imu2_temp	37.5	
		fenceb_count	0	gpsyaw	0	imu3_temp	0	
		fenceb_status	0	gpsyaw2	0	KIndex	-1	
		fenceb_type	0	groundcourse	0	landed	True	
		fixdep	0	groundcourse2	0	landed_state	0	
		freemem	598848	groundspeed	0.02	lat	22.5162	
		gen_current	0	groundspeed2	0	lat2	0	
		gen_maint_time	0	gx	3	linkqualitygs	100	
		gen_runtime	0	gx2	-1	lne	113.683	

The message in the ground station's status bar, "EKF3 IMUx yaw aligned," indicates that the dual-antenna orientation is effective.

The screenshot shows the Mission Planner 1.3.81 interface. The top status bar displays "DISARMED" in large red letters. Below it, various flight parameters are shown: AS 0.8m/s, GS 0.0m/s, Bat 1 25.92v 0.9 A 98%, and EKF Vibe. The bottom status bar shows "Ready to Arm", "GPS: 3D dgps", and "GPS2: rtk Fixed". The main display area is split into a left gauge section and a right map section. The gauge section shows a heading scale from 0 to 90 degrees. The map section shows a street map with a red airplane icon indicating the drone's position. The bottom status bar contains a log of messages, with the following entries highlighted in red:

```

4/20/2024 5:21:15 PM EKF3 IMUx yaw aligned
4/20/2024 5:21:15 PM EKF3 IMUx yaw aligned
4/20/2024 5:21:10 PM PreArm: GPS[2] yaw not available
4/20/2024 5:21:10 PM PreArm: Check mag field (xy diff: 112>100)
4/20/2024 5:20:39 PM PreArm: GPS[2] yaw not available
4/20/2024 5:20:39 PM PreArm: Compasses inconsistent
4/20/2024 5:20:08 PM PreArm: GPS[2] yaw not available
4/20/2024 5:20:08 PM PreArm: Compasses inconsistent
4/20/2024 5:19:06 PM IMU0: fast sampling enabled 8.0kHz/2.0kHz
4/20/2024 5:19:06 PM EKF3: FHM-1-15
4/20/2024 5:19:06 PM IMU0: 0 0 411FC231
4/20/2024 5:19:06 PM SIYI_N7_00460044_31325116_39363634
4/20/2024 5:19:06 PM ChibiOS: 9e116574
4/20/2024 5:19:06 PM ArduPlane V4.5.0-dev (fc82da1)
4/20/2024 5:19:04 PM IMU0: fast sampling enabled 8.0kHz/2.0kHz
4/20/2024 5:19:04 PM EKF3: FHM-1-15
4/20/2024 5:19:04 PM IMU0: 0 0 411FC231
4/20/2024 5:19:04 PM SIYI_N7_00460044_31325116_39363634
4/20/2024 5:19:04 PM ChibiOS: 9e116574
  
```




# Chapter 4: Centimeter-Level Positioning with RTK

The RTK base station and mobile module can be used in combination to establish a connection through the flight controller and data link, enabling centimeter-level positioning.




## 4.1 Base Station Connection Instructions

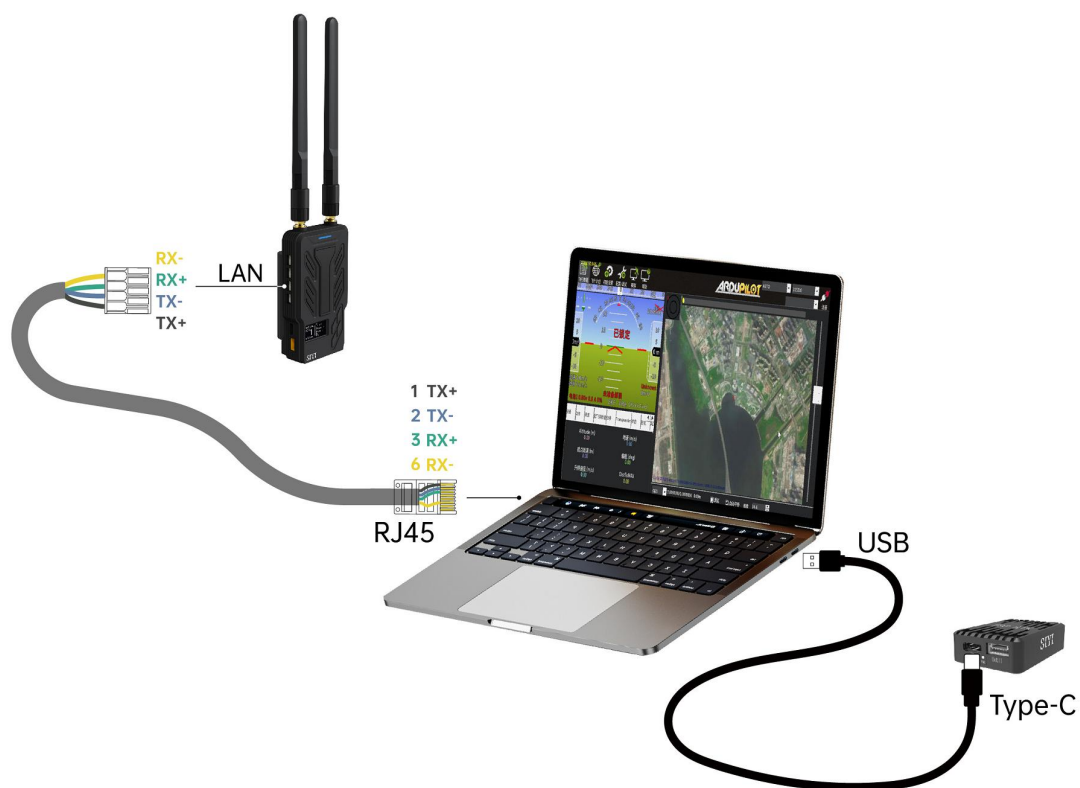


Refer to the above diagram to set up the F9P RTK base station. The base station communicates with the PC ground station and transmits the real-time position of the RTK base station to the flight controller via the data link.

### Ground Station Parameter Settings:

Run the Mission Planner ground station software and navigate to “Initial Setup > Optional Hardware > RTK.”

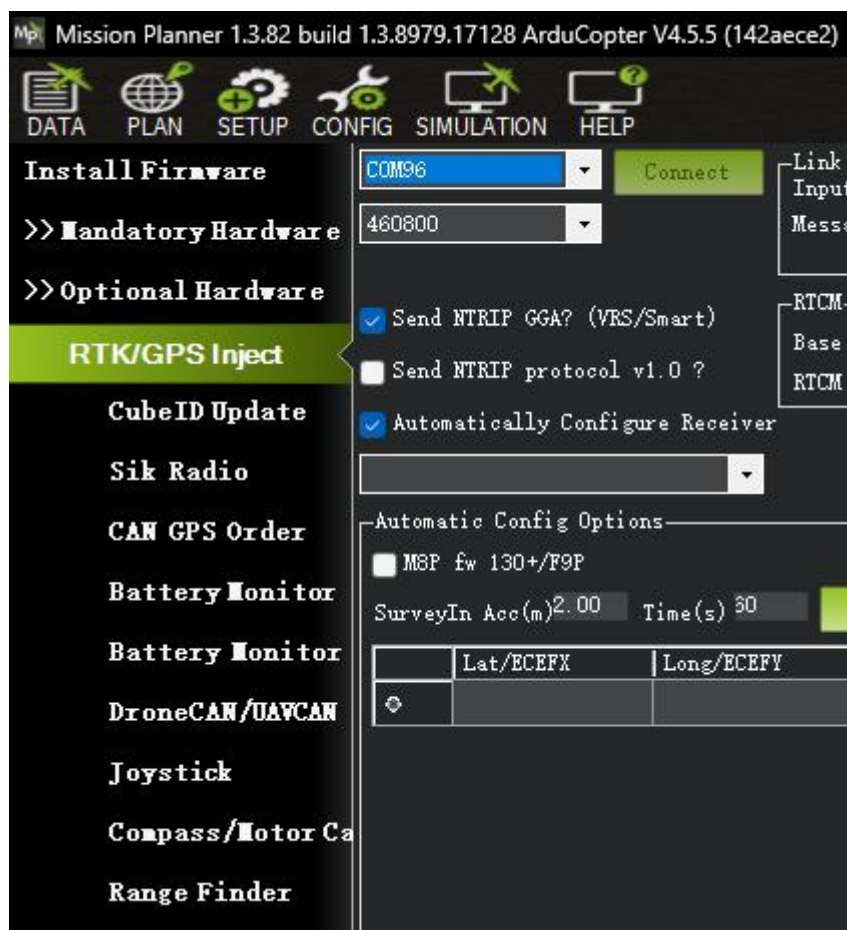

Refer to the image below for parameter configuration:

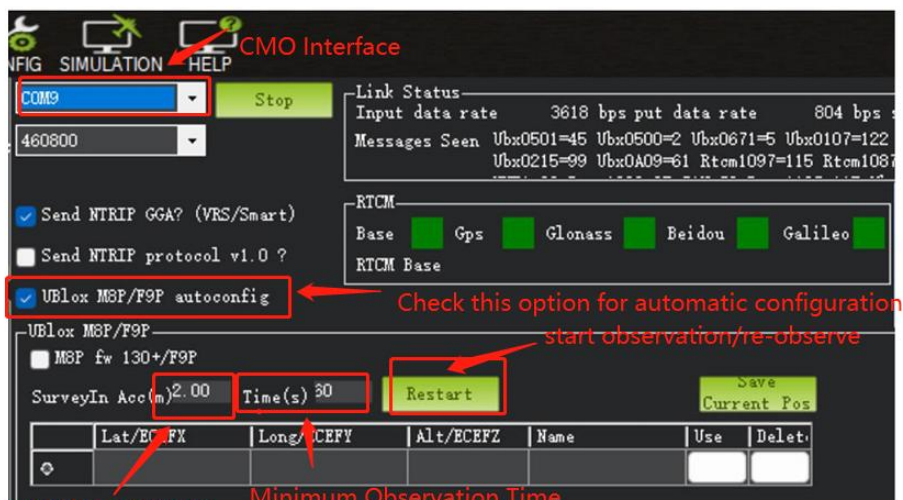


① positioning status

② satellite search status

③ satellite search time

④ number of acquired observation data

⑤ current positioning accuracy of the base station

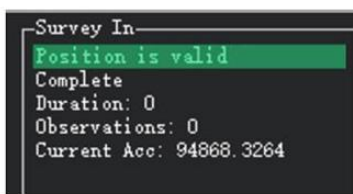


It is recommended to check the option for automatic configuration of the F9P, set the observation accuracy to 2.5, and the minimum observation time to 60s.

After completing the settings, click Restart to begin the observation.

## Warning

Once the base station positioning is successful, do not move the base station under any circumstances!

When the base station is operating normally and convergence is complete, the ground station interface will display as shown in the diagram below.

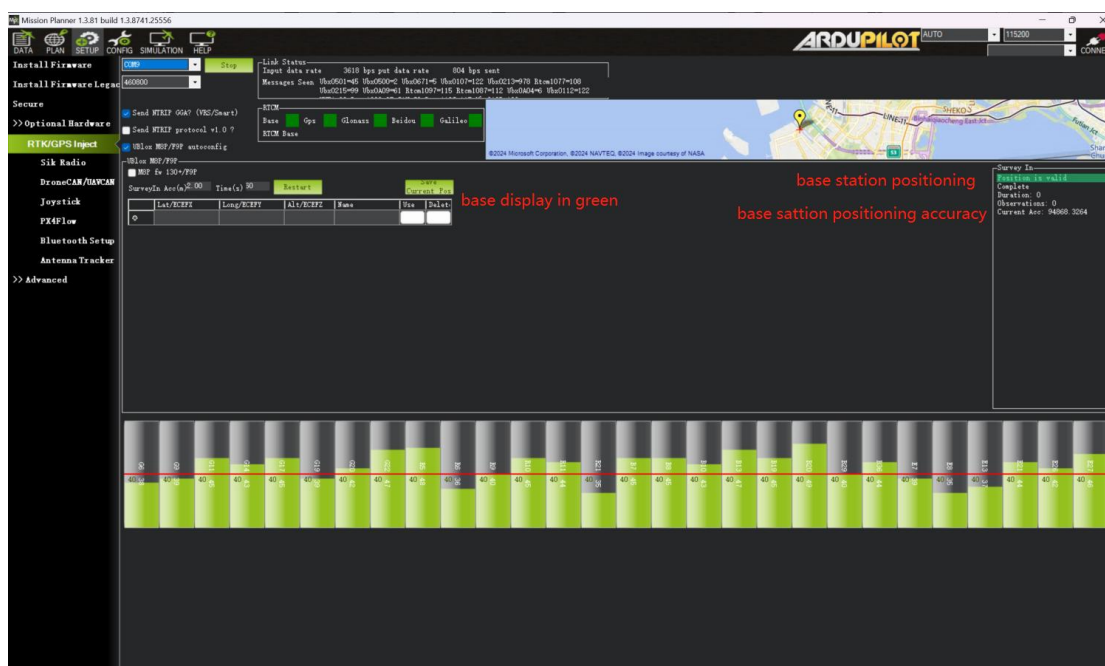

The GPS status will display rtk fixed, indicating that the system has successfully entered RTK positioning mode.



## Chapter 5: Using Network RTK with SIYI Handheld Ground Station

The SIYI handheld ground station, in conjunction with the RTK mobile module and network RTK base station, can achieve network RTK functionality.




Use the SIYI handheld ground station to run the Mission Planner ground station software, connecting the SIYI handheld ground station to the mobile internet. Go to “Initial Setup > RTK > NTRIP.”



The protocol address format is as follows (using Qianxun RTK as an example):

[http://USER:PASSWORD@rtk.ntrip.qxwz.com:8002/RTCM32\\_GGB](http://USER:PASSWORD@rtk.ntrip.qxwz.com:8002/RTCM32_GGB)



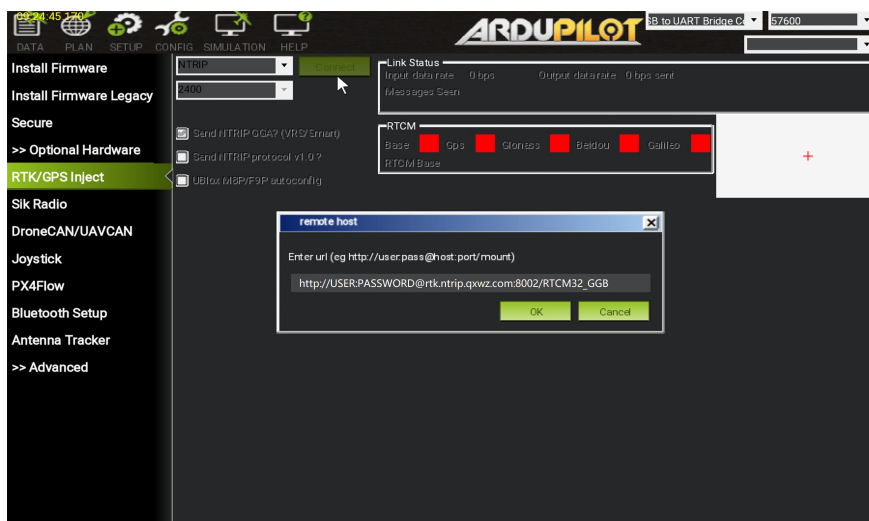

In this format, USER is the username for the FindCM service account applied for by the user, PASSWORD is the corresponding password, rtk.ntrip.qxwz.com is the FindCM service address for the Qianxun positioning server, 8002 is the port broadcasting WGS84 coordinate system data, and RTCM32\_GGB is the data source for broadcasting RTCM 3.2 format data.

### Note

For more detailed information, you can consult the Qianxun Network RTK official documentation:

<https://www.qxwz.com/help-document-location-service.html#link>

-5。

After correctly obtaining the base station data, you can observe information such as protocol number, data rate, base station coordinates, satellite numbers, and signal-to-noise ratio (SNR) on the RTK/GPS inject page.

 Note

Although this chapter uses the Android version of Mission Planner as an example to set network RTK parameters, we do not recommend using this method for aircraft parameter tuning. For complex flight control parameter adjustments, it is preferable to use the Windows version of Mission Planner.

## **Chapter 6: After-Sale Service**

If there were any questions or problems using SIYI Technology's product, you can always try to send an email to SIYI Official A/S Center (support@siyi.biz) or consult your sales representative or dealer for answers or solutions.

### **6.1 Repair Service**

If your purchased SIYI products cannot work properly, please contact SIYI Official A/S Center for consulting.

Usually there are two situations for acquiring repair service.

- Product Defect
- Product Damage

SIYI products under the two situations can be sent back to SIYI for repairing. Defect products with valid warranty can be repaired for free. Defect products without valid warranty or damaged products

should be charged of repair fees after repairing. Please refer to SIYI's Official A/S Quotation for detail.

## **6.2 Warranty**

SIYI Technology guarantees that, subject to the following conditions, Return & Refund Service, Replacement Service, and Warranty Repair Service can be requested. Please contact SIYI directly (support@siyi.biz or your sales representative) or authorized SIYI dealer for more detail.

### **6.2.1 7-Day Return & Refund**

You can request Return & Refund Service:

Within seven (7) days of receiving a product if the product has no manufacturing defect, has not been activated and is still in new or like-new condition.

Within seven (7) days of receiving a product if the product has a manufacturing defect.

Return & Refund Service will not be provided where:

It is requested beyond seven (7) calendar days of receiving a product.

A product sent to SIYI for Return & Refund Service does not include all original accessories, attachments or packaging, or any item is not in new or like-new condition, i.e., with cracks, dents, or scratches.

A legal proof of purchase, receipt or invoice is not provided or is reasonably believed to have been forged or tampered with.

Any fault or damage of the product is caused by unauthorized use or modification of the product, including exposure to moisture, entry of foreign bodies (water, oil, sand, etc.) or improper installation or operation.

Product labels, serial numbers, waterproof marks, etc. show signs of tampering or alteration.

Damage is caused to the product by uncontrollable external factors, including fire, floods, high winds, or lightning strikes.

A product is not delivered to SIYI within seven (7) calendar days after Return & Refund Service confirmation is sent from SIYI.

Other circumstances stated in this policy.

### **6.2.2 15-Day Replacement**

You can request Replacement Service:

Within fifteen (15) calendar days of receiving the product if the product has sustained a substantial damage in transit, provided always that the damage proof issued by the carrier can be provided to SIYI.

Within fifteen (15) calendar days of receiving the product if the product does not match the original description of the product in one or more significant respects.

Within fifteen (15) calendar days of receiving the product if the product suffers performance failure.

Replacement Service will not be provided where:

Service is requested more than fifteen (15) calendars days after receiving a product.

Legal proof-of-purchase, receipts, or invoices are not provided, or are reasonably believed to have been forged or tampered with.

A product sent to SIYI for replacement does not include all original accessories, attachments, and packaging, or contains items damaged by user error.

A product is found to have no defects after all appropriate tests are conducted by SIYI.

Any fault or damage of the product is caused by unauthorized use or modification of the product, including exposure to moisture, entry of foreign bodies (water, oil, sand, etc.) or improper installation or operation.

Damage is caused by uncontrollable external factors, including fires, floods, high winds, or lightning strikes.

Received product has not been sent back to SIYI seven (7) calendar days after replacement confirmation from SIYI.

Proof of damage during transit issued by the carrier cannot be provided.

Other circumstances stated in this policy.

### **6.2.3 1-Year Warranty Repair**

You can request warranty repair service:

If a product does not function as warranted during the warranty period, you may obtain after-sales service by contacting SIYI's service center. You will need to provide a valid proof-of-purchase, receipt, or order number for the warranty service.

Charges may apply for services not covered by this Limited Warranty. Please contact SIYI for information specific to your location.

Please note that the warranty service is only available in the respective SIYI service regions where you purchased your SIYI product.

Warranty Repair service will not be provided where:

Crashes or fire damage caused by non-manufacturing factors, including but not limited to pilot errors.

Damage caused by unauthorized modification, disassembly, or shell opening not in accordance with official instructions or manuals.



Damage caused by improper installation, in correct use, or operation not in accordance with official instructions or manuals.

Damage caused by non-authorized service provider.

Damage caused by unauthorized modification of circuits and mismatch or misuse of the battery and charger.

Damage caused by operation in bad weather (i.e., strong winds, rain, sand/dust storms, etc.)

Damage caused by operating the product in an environment with electromagnetic interference (i.e., in mining areas or close to radio transmission towers, high-voltage wires, substations, etc.)

Damage caused by operating the product in an environment suffering from interference from other wireless devices (i.e., transmitter, video-downlink, Wi-Fi signals, etc.)

Damage caused by reliability or compatibility issues when using unauthorized third-party parts.

Damage caused by operating the unit with a low-charged or defective battery.

Products or parts with an altered identification label or from which the identification label has been removed.

## **SIYI Technology**

Business Inquiry: [info@siyi.biz](mailto:info@siyi.biz)

Phone: +86 400 838 2918

A/S Center: [support@siyi.biz](mailto:support@siyi.biz)